


FITTING INSTRUCTIONS FOR NO-DRILLING BRACKET SYSTEMS

ATTACH YOUR LICENCE PLATE **WITHOUT** DRILLING HOLES IN YOUR VEHICLE

! BEFORE YOU START Check if your number plate is fitted with screws or sticky pads. You will need replacement double sided number plate sticky pads if your number plate is fixed on. These are available on the MOGO website.


FOR ADJUSTABLE BRACKETS: You will need to set the depth before affixing to the vehicle. 1- Fully extend the bracket and line up in place on the vehicle. 2 - Adjust as necessary, to ensure the bracket is close to, but not touching, the bodywork, allowing an additional 5mm for the depth of the number plate. Then tighten the Nylon bolts at the desired depth.

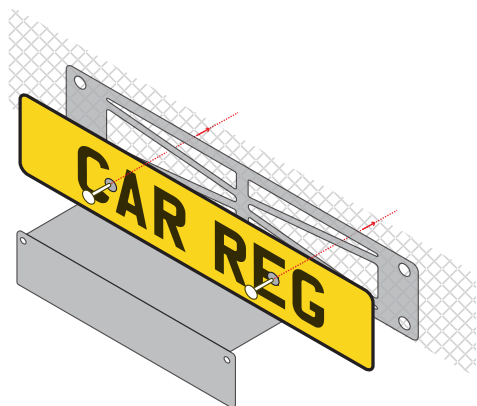

STEP 2A

FOR SCREWED PLATES:


Unscrew your number plate. Place the back part of the MOGO bracket behind the number plate and refit the number plate to the vehicle using the existing screws to secure the MOGO bracket firmly between the car body and the number plate.

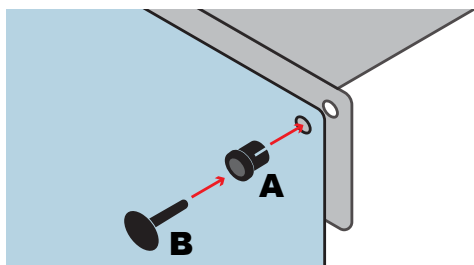

STEP 3


FITTING YOUR LICENCE PLATE TO THE BRACKET: Line up the holes in your MOGO licence plate with those in the MOGO bracket. Attach firmly by pushing the supplied locking pins through the front of the plate. Push (A) into the plate first, then (B) after until you hear a click.

Please note that when fitting some large square licence plates to our adjustable brackets you will only be able to use 2 locking pins to secure the licence plate.

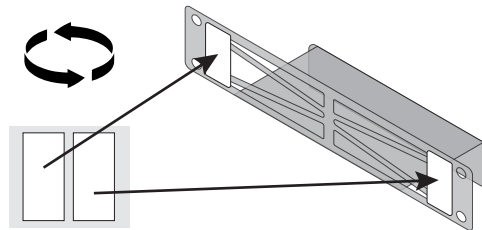

STEP 1

Place the supplied sticky pads to the back of the MOGO bracket, these will hold the bracket in place whilst fixing your number plate to your vehicle and protect your vehicles bodywork.

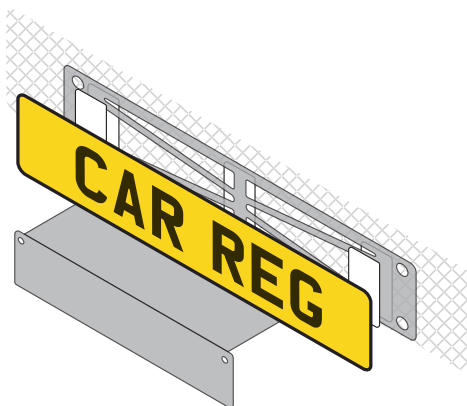

STEP 2B

FOR NUMBER PLATES FIXED WITH STICKY PADS:

Gently ease off the number plate, clean and dry the surfaces to maximise adhesion of the replacement sticky pads.

Position the back of the MOGO bracket into the number plate recess using sticky pads provided. Refit the number plate to the vehicle on top of the vehicle bodywork and bracket using additional number plate double sided sticky pads (not supplied) to secure the MOGO bracket firmly between the car body and the number plate, apply pressure for a few moments to ensure the sticky pads adhere well.

NOTES

Generally the brackets are mounted to show the licence plate below the number plate. However in some instances, if it doesn't obscure the number plate lights, the bracket can be rotated to hold the licence plate above the number plate.

For clearer identification of vehicles to the public, some local authorities request that vehicles also display front licence plates. The Reverse Euro Bracket and Standard Long Licence Bracket are suited to this application.




**VIEW OUR
FITTING GUIDE
VIDEO BY SCANNING
THE QR CODE**

USING LOCKING PINS FOR NO-DRILLING BRACKET SYSTEMS


1: SEPARATE LOCKING PINS



2: INSERT (A) FROM THE FRONT OF THE PLATE

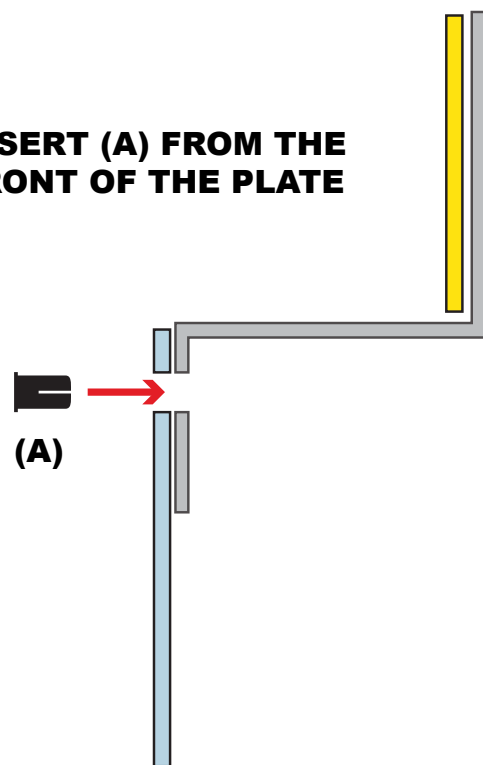

3: INSERT (B) INTO (A)

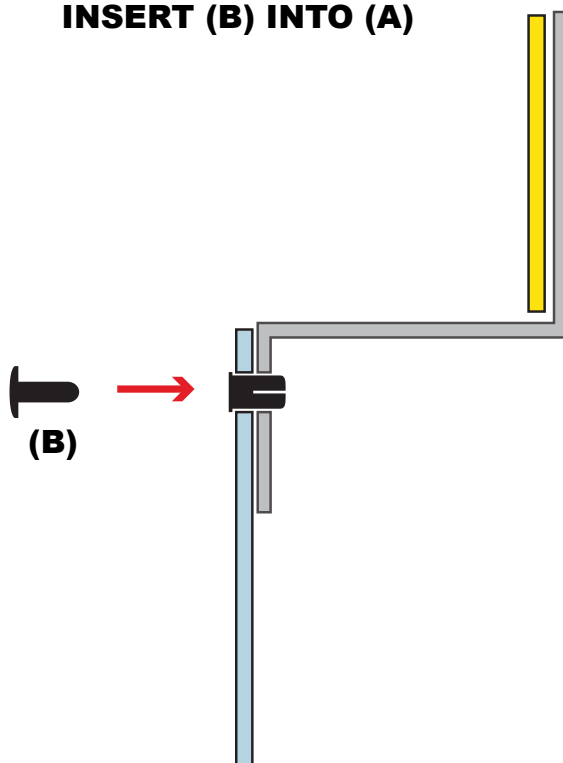

4: LISTEN FOR THE *CLICK* THE LOCKING PIN IS NOW SECURE

